

ASSEMBLY INSTRUCTIONS for MOUNTING TOPS TO 4-POST TABLES

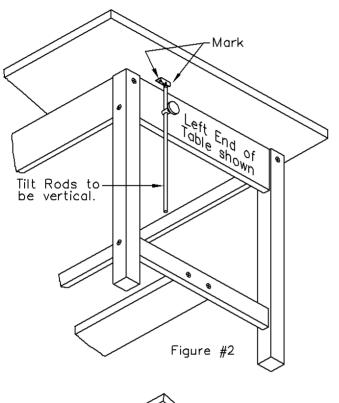

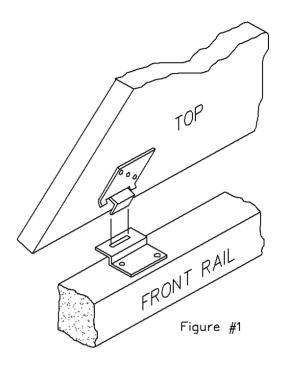




- 2. With the Top in a horizontal position, mark around the Tilt Brackets as shown in Figure #2.
- 3. Raise the top, position the bracket where marked and insert Screws as shawn in Figure #3.

NOTE:

ON HIGH-PRESSURE LAMINATE TOPS, RECOMMENDED PRE-DRILLING BEFORE INSERTING SCREWS IS 1/8 DIA X 3/4 DEEP.



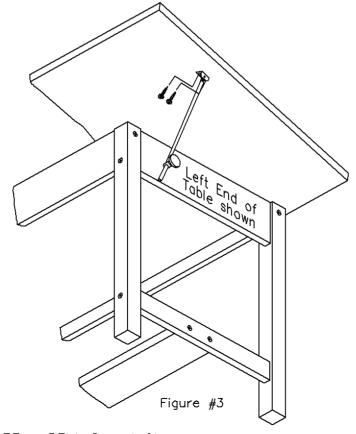

I-57 REV. 3 4-01